


FADINI JUBI 2 REMOTE CODING INSTRUCTIONS



CODING A REMOTE

CHANNEL 1 Insert the “JUMPER” jumper in position “P1”; the next step is to press simultaneously the switch button “P” on the receiver card and a push button (any desired one) on the transmitter for about 5 seconds. Once the code has been memorized by the unit, the led flashes once.

CHANNEL 2 Repeat the above sequence above, but the “JUMPER” jumper must be inserted in position “P2”. NB: Once finished, remove the “JUMPER” and put it on to one “PIN” only, to stop any linking, ie. Operative action. Plug-in radio receiver card type “Jubi 433/2 R” fitted with stabilized resonator, complete with two relay modules for channels 1 and 2, 433.92 MHz

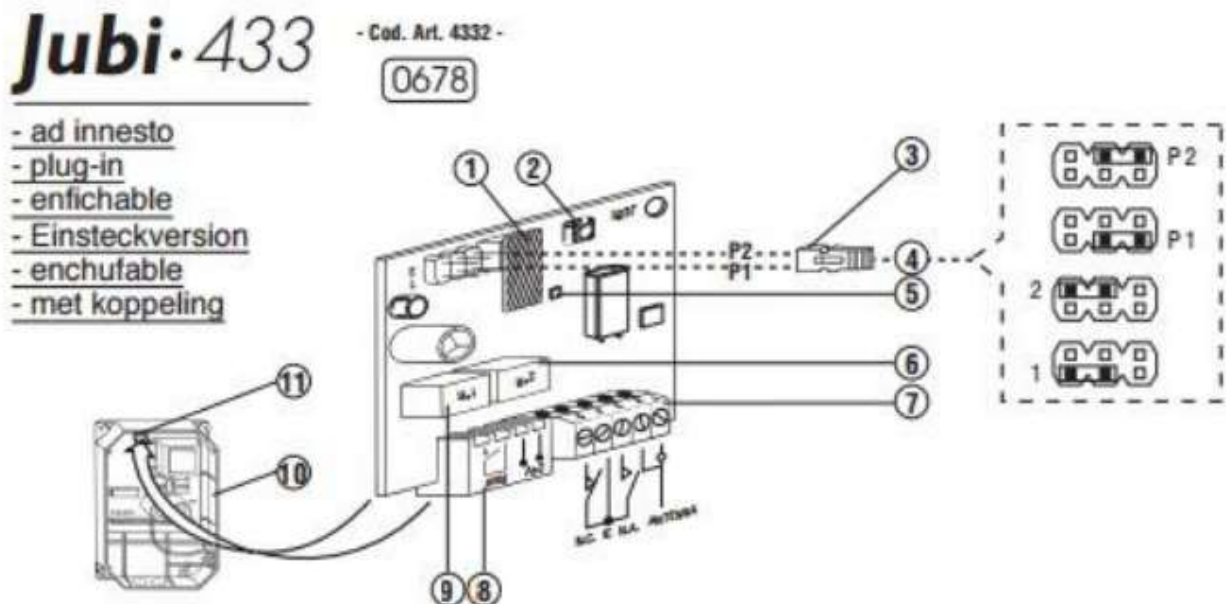

DELETING

To perform the total removal of the receiver encoded memory, position the “JUMPER”. Press the switch button “P” for 5 seconds, then release it. The led flashes once to confirm that the removal operation has been carried out completely.